



## Technical Service Bulletin

### SSF-300 Speedy Super Foamer Replacement Parts Installation

A replacement parts kit SSF-301 is available to service the most common wear items in the SSF-300 Speedy Super Foamer

SSF-301 Replacement Parts Kit includes: (1) Strainer, (1) Large "O" Ring, (1) Medium "O" Ring, (1) Small "O" Ring.

#### Disassembly:

1. Disconnect the Speedy Super Foamer from the high pressure water hose.
2. Remove the dispenser bottle.
3. Remove the adjustable black nozzle by pushing the retaining pin out using a punch. The pin should have a smooth snug fit, do not hammer the pin out. (Fig 2.)
4. Pull the adjustable black nozzle off the foamer head. (Fig 3.)
5. Remove the inner nozzle assembly using a 7/8" wrench. Use care not to damage the plastic portion of the nozzle during disassembly. (Fig 4.)
6. Push the strainer out of the rear of the inner nozzle assembly using an appropriately sized punch. The strainer should come out easily. (Fig 5.)
7. Remove the air adjustment knob by loosening the Phillips head screw in the center. (Fig 6.)
8. Remove the air adjustment shaft cap using an 11/16" wrench. (Fig 7.)
9. Replace the "O" rings that are now visible. One beneath the adjustable black nozzle, one behind the inner nozzle assembly and one under the air adjustment shaft cap. (Fig 8.)
10. Replace the strainer with the clean one included in the kit.
11. Re-assembly is the reverse of disassembly.
12. During re-assembly the pin that secures the adjustable black nozzle fits in the groove in the inner nozzle assembly, check for alignment before installing the pin. (Fig. 5)



SSF-301

7/8" wrench

11/16" wrench

Phillips head screwdriver

3mm pin punch







Fig. 2




Fig. 3

 

Fig. 4

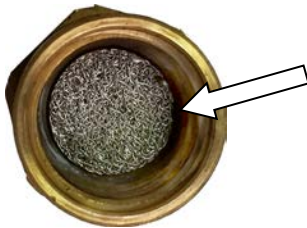

strainer

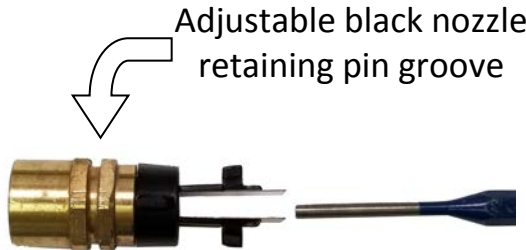

Adjustable black nozzle retaining pin groove


Fig. 5



Fig. 6



Fig. 7

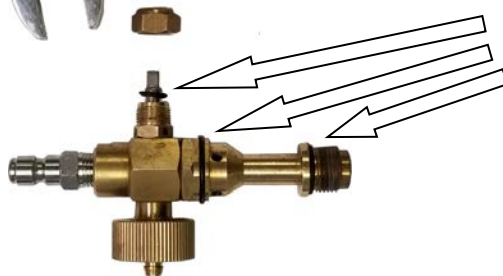

Replace these "O" rings

Fig. 8